



Elate 1000

ITEM#	PARTS DESCRIPTION	ITEM#	PARTS DESCRIPTION
1	Drag Knob Assembly	35	Spring
2	Spool Assembly	36	Bearing Holder
3	Spool Rubber	37	Screw(3req.)
4	Washer Retaining Ring	38	Ball Bearing Retainer
5	Keyed Washer	39	Rotor Washer
6	Ear Washer	40	Rotor Assembly
7	Washer(2req.)	41	Main Shaft
8	Bearing(2req.)	42	Bail Arm Screw(2req.)
9	Spool	43	Bushing(2req.)
10	Spool Adjust Washer	44	Counterbalance
11	Click Gear	45	Rotor Trip Lever
12	Screw	46	Spring
13	Rotor Nut	47	Pivot Arm
14	Rotor Nut Set Plate	48	Bail Arm Cover
15	Washer	49	Screw
16	Handle Cap	50	Screw
17	Washer	51	Bail Arm
18	Body Assembly	52	Line Roller Collar
19	Body Rear Cover	53	Line Roller
20	Screw	54	Line Roller Washer
21	Idle Gear	55	Bearing bush
22	Oscillation Gear	56	Bail Assembly
23	Bearing(2req.)	57	Bail Holder
24	Bushing	58	Screw
25	Screw	59	Pom Bushing
26	Bearing	60	Clutch Switch Spring
27	Driver Gear	61	Clutch Switch
28	Washer	62	Slider Guide Shaft
29	Bearing(3req.)	63	Slider
30	Body Cover Assembly	64	Screw
31	Screw(3req.)	65	Handle Knob Cap
32	Screw	66	Handle Assembly
33	Pinion	67	Bail Holder Cover
34	Clutch Assembly		