


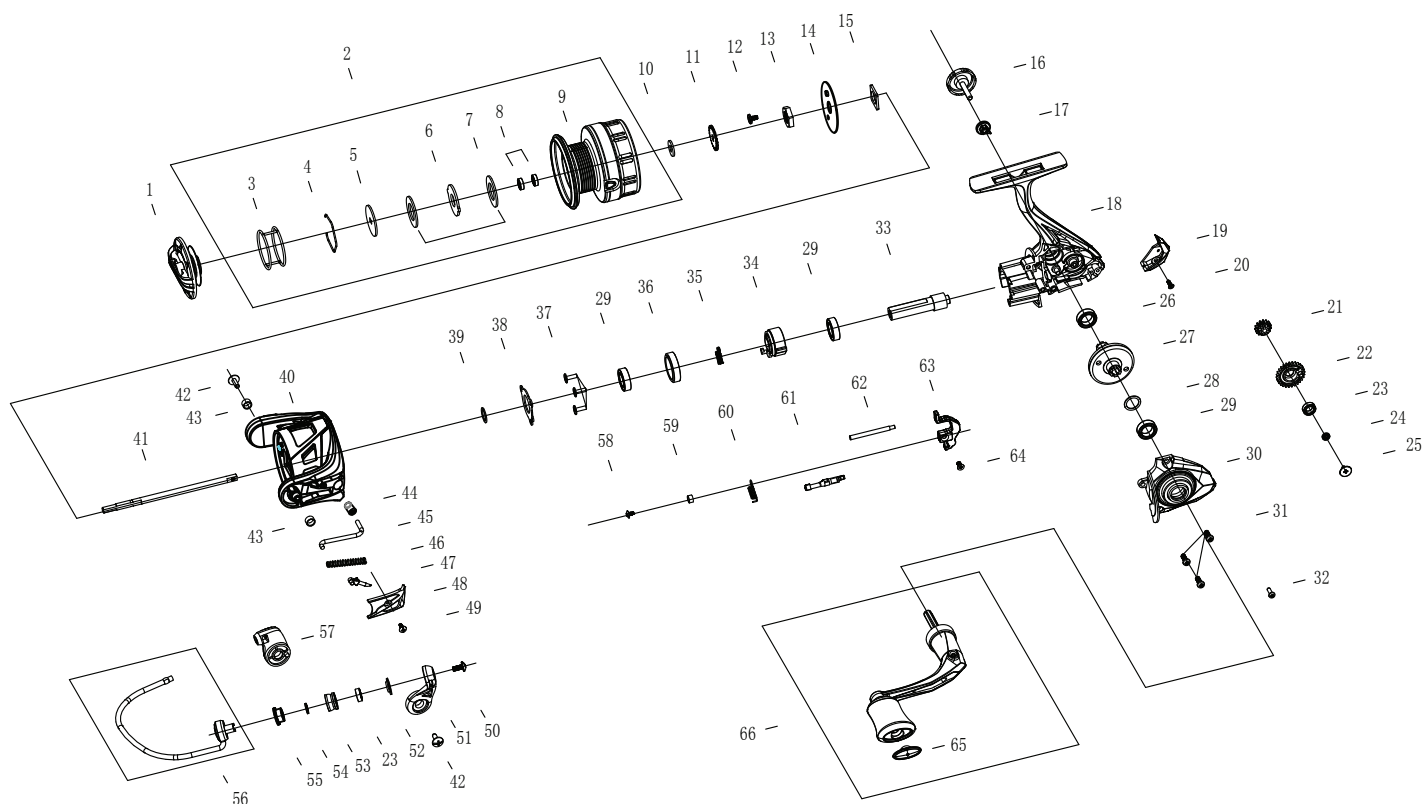

Ideal 1000

ITEM#	PARTS DESCRIPTION	ITEM#	PARTS DESCRIPTION
1	Drag Knob Assembly	34	Clutch Assembly
2	Spool Assembly	35	Spring
3	Spool Rubber	36	Bearing Holder
4	Washer Retaining Ring	37	Screw(3req.)
5	Keyed Washer	38	Ball Bearing Retainer
6	Ear Washer	39	Rotor Washer
7	Washer(2req.)	40	Rotor Assembly
8	Bearing(2req.)	41	Main Shaft
9	Spool	42	Bail Arm Screw(2req.)
10	Spool Adjust Washer	43	Bushing(2req.)
11	Click Gear	44	Counterbalance
12	Screw	45	Rotor Trip Lever
13	Rotor Nut	46	Spring
14	Rotor Nut Set Plate	47	Pivot Arm
15	Washer	48	Bail Arm Cover
16	Handle Cap	49	Screw
17	Washer	50	Screw
18	Body Assembly	51	Bail Arm
19	Body Rear Cover	52	Line Roller Collar
20	Screw	53	Line Roller
21	Idle Gear	54	Line Roller Washer
22	Oscillation Gear	55	Bearing bush
23	Bearing(2req.)	56	Bail Assembly
24	Bushing	57	Bail Holder
25	Screw	58	Screw
26	Bearing	59	Pom Bushing
27	Driver Gear	60	Clutch Switch Spring
28	Washer	61	Clutch Switch
29	Bearing(3req.)	62	Slider Guide Shaft
30	Body Cover Assembly	63	Slider
31	Screw(3req.)	64	Screw
32	Screw	65	Handle Knob Cap
33	Pinion	66	Handle Assembly